

ALARM  
MONITORING  
DATA LOGGING

# AS300 SYSTEM APN SETTINGS



## Section 1 ► NETWORK SETTINGS WAP (APN Settings)

For data to be sent to the server the network settings must be set up in the AS300SA, AS300RX or Communicator. Each network has different settings, the AS300SA, AS300RX and Communicator by default is setup for a O2 PAYG SIM. If you have purchased your PAYG SIM with the AS300SA, AS300RX or Communicator the relevant network settings will have been set for you. Some networks change their settings from time to time if the setup does not work check the internet at [http://www.unlocks.co.uk/gprs\\_settings.php#uk](http://www.unlocks.co.uk/gprs_settings.php#uk) for current settings.



### Settings For O2 PAYG Sim cards

For data to be sent to the server the network settings must be set up in the unit.

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPAPNspacepayandgo.o2.co.uk**

**\*\*\* IPAPN payandgo.o2.co.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPUSRspacepayandgo**

**\*\*\* IPUSR payandgo**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPPWDspacepassword**

**\*\*\* IPPWD password**



### Settings For Vodafone PAYG Sim cards

For data to be sent to the server the network settings must be set up in the unit.

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPAPNspacepp.vodafone.co.uk**

**\*\*\* IPAPN pp.vodafone.co.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPUSRspacewap**

**\*\*\* IPUSR wap**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPPWDspacewap**

**\*\*\* IPPWD wap**



### Settings For Orange PAYG Sim cards

For data to be sent to the server the network settings must be set up in the unit.

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPAPNspacepaywap.co.uk**

**\*\*\* IPAPN paywap.co.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPUSRspaceorange**

**\*\*\* IPUSR orange**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPPWDspaceMultimedia**

**\*\*\* IPPWD Multimedia**



### Settings For T-Mobile PAYG Sim cards.

For data to be sent to the server the network settings must be set up in the unit

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPAPNspacegeneral.t-mobile.uk**

**\*\*\*# IPAPN general.t-mobile.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPUSRspaceuser**

**\*\*\*# IPUSR user**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPPWDspacetm**

**\*\*\*# IPPW tm**



### Settings For Three PAYG Sim cards

For data to be sent to the server the network settings must be set up in the unit.

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPAPNspacethree.co.uk**

**\*\*\*# IPAPN three.co.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPUSRspaceguest**

**\*\*\*# IPUSR guest**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPPWDspaceguest**

**\*\*\*# IPPWD guest**



### Settings For Tesco PAYG Sim cards

For data to be sent to the server the network settings must be set up in the unit.

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPAPNspaceprepay.tesco-mobile.com**

**\*\*\*# IPAPN prepay.tesco-mobile.com**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPUSRspacetescowap**

**\*\*\*# IPAPN tescowap**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPPWDspacepassword**

**\*\*\*# IPPWD password**



### Settings For Virgin Mobile PAYG Sim cards.

For data to be sent to the server the network settings must be set up in the unit

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPAPNspacegoto.virginmobile.uk**

**\*\*\*# IPAPN goto.virginmobile.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPUSRspaceuser**

**\*\*\*# IPUSR user**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPPWDspace**

**\*\*\*# IPPW**



### Settings For Asda PAYG Sim cards

For data to be sent to the server the network settings must be set up in the unit.

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPAPNspaceasdamobiles.co.uk**

**\*\*\*# IPAPN asdamobiles.co.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPUSRspacewap**

**\*\*\*# IPUSR wap**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPPWDspacewap**

**\*\*\*# IPPWD wap**



### Settings For BT PAYG Sim cards

For data to be sent to the server the network settings must be set up in the unit.

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPAPNspacebtmobile.bt.com**

**\*\*\*# IPAPN btmobile.bt.com**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPUSRspacebt**

**\*\*\*# IPAPN bt**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPPWDspacebt**

**\*\*\*# IPPWD bt**

### Settings For O2 CONTRACT Sim cards

For data to be sent to the server the network settings must be set up in the unit.



#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPAPNspacewap.o2.co.uk**

**\*\*\*# IPAPN wap.o2.co.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPUSRspaceo2wap**

**\*\*\*# IPUSR o2wap**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPPWDspacepassword**

**\*\*\*# IPPWD password**

### Settings For Vodafone CONTRACT Sim cards

For data to be sent to the server the network settings must be set up in the unit.



#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPAPNspace wap.vodafone.co.uk**

**\*\*\*# IPAPN wap.vodafone.co.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPUSRspacewap**

**\*\*\*# IPUSR wap**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPPWDspacewap**

**\*\*\*# IPPWD wap**

### Settings For Orange CONTRACT Sim cards

For data to be sent to the server the network settings must be set up in the unit.



#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPAPNspaceorangewap.co.uk**

**\*\*\*# IPAPN orangewap.co.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPUSRspaceorange**

**\*\*\*# IPUSR orange**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*#spaceIPPWDspaceMultimedia**

**\*\*\*# IPPWD Multimedia**



### Settings For T-Mobile CONTRACT Sim cards.

For data to be sent to the server the network settings must be set up in the unit

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPAPNspacegeneral.t-mobile.uk**

**\*\*\* IPAPN general.t-mobile.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPUSRspaceuser**

**\*\*\* IPUSR user**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPPWDspacetm**

**\*\*\* IPPW tm**



### Settings For Three CONTRACT Sim cards

For data to be sent to the server the network settings must be set up in the unit.

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPAPNspacethree.co.uk**

**\*\*\* IPAPN three.co.uk**

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPUSRspaceguest**

**\*\*\* IPUSR guest**

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPPWDspaceguest**

**\*\*\* IPPWD guest**



### Settings For Virgin Mobile CONTRACT Sim cards.

For data to be sent to the server the network settings must be set up in the unit

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPAPNspacegoto.virginmobile.uk**

\*\*\* IPAPN goto.virginmobile.uk

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPUSRspaceuser**

\*\*\* IPUSR user

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPPWDspace**

\*\*\* IPPW



### Settings For Asda CONTRACT Sim cards

For data to be sent to the server the network settings must be set up in the unit.

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPAPNspaceasdamobiles.co.uk**

\*\*\* IPAPN asdamobiles.co.uk

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPUSRspacewap**

\*\*\* IPUSR wap

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPPWDspacewap**

\*\*\* IPPWD wap



### Settings For BT CONTRACT Sim cards

For data to be sent to the server the network settings must be set up in the unit.

#### APN Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPAPNspacemobile.bt.com**

\*\*\* IPAPN mobile.bt.com

#### User Name Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPUSRspaceuser**

\*\*\* IPAPN user

#### Password Setting

Send a text a message to the AS300 Unit with the following text :-

**\*\*\*spaceIPPWDspacewap**

\*\*\* IPPWD wap

**Section 2 ► CHECK the APN SETTINGS INSTALLED****Checking the APN Settings in the AS300SA or AS300RX**








Send a text a message to the AS300SA Unit with the following text :-  
**\*##spaceGPRS?**

**\*## IGPRS?**

A message will be sent back to the mobile with APN settings.

**Section 3 ► CREDIT CHECKS FOR PAYG SIMS****Checking Credit on a PAYG Sim Cards**

O2 and Vodafone sim card will show the credit available on the display of the AS300SA or AS300RX. All other networks will require the sim card to be removed from the AS300SA or AS300RX and inserted into a mobile phone to check the available credit . Once inserted into a mobile phone, text or dial the relevant command to obtain credit available.

NETWORK	TEXT OR DIAL	COMMAND
	TEXT	*#10#
	TEXT	*#1345#
	DIAL	453
	DIAL	150
	TEXT	*#10#
	DIAL	789
	TEXT	*#1345#